
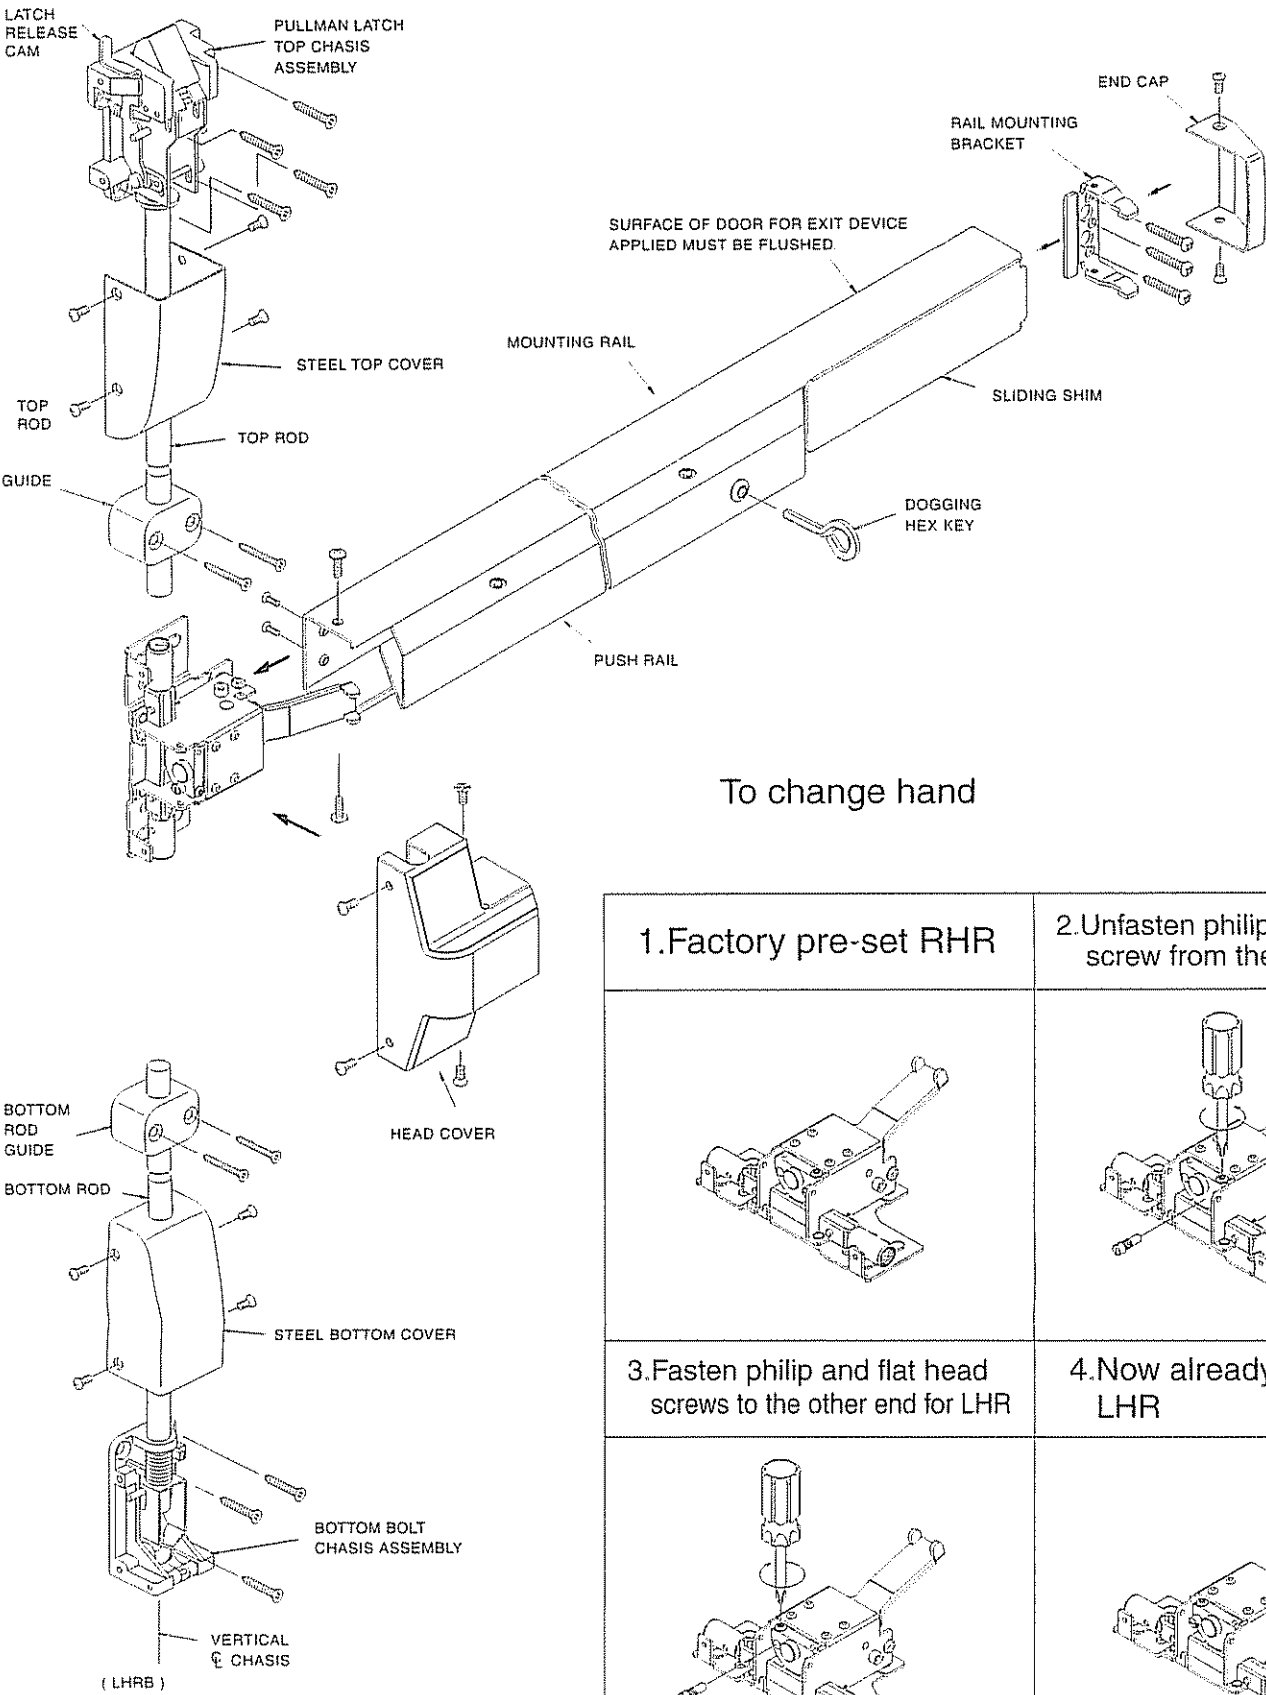
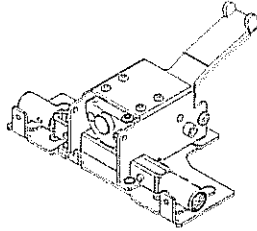
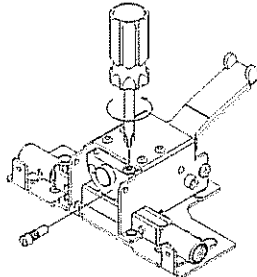
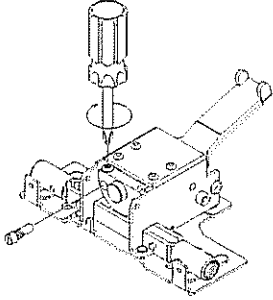


INSTALLATION INSTRUCTION FOR SF-SVRTBAR SERIES SURFACE VERTICAL ROD EXIT DEVICE.

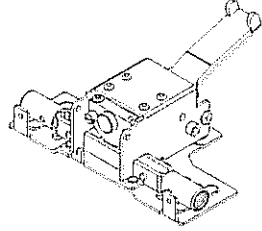


1.Factory pre-set RHR	2.Unfasten philip and flat head screw from the pre-set RHR
	
3.Fasten philip and flat head screws to the other end for LHR	4.Now already changed to LHR
	

1. MARK VERTICAL AND HORIZONTAL REFERENCE LINE ON DOOR.


DETERMINE BACKSET TO LOCATE VERICAL REFERENCE LINE

- 1 IF LOCK STILE IS 4 1/2" WIDE OR WIDER, BACKSET IS 2 3/4"
- 2 IF LOCK STILE IS LESS THAN 4 1/2" WIDE, BACKSET IS HALF OF THE EXPOSED WIDTH OF LOCK STILE

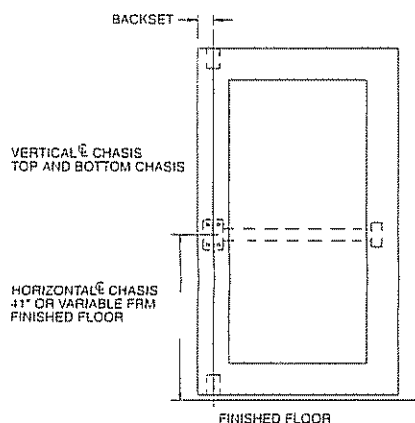


2. PREPARE DOOR

TAPE TEMPLATE ON INSIDE OF DOOR ALONG REFERENCE LINE
SPOT AND DRILL HOLE

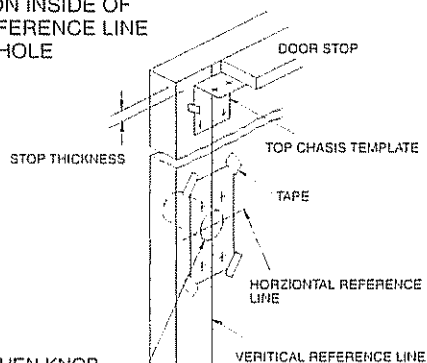

2 1/8" Ø BORE WHEN KNOB
AND LEVER TRIM IS USED

3. APPLY TRIM+CHASIS

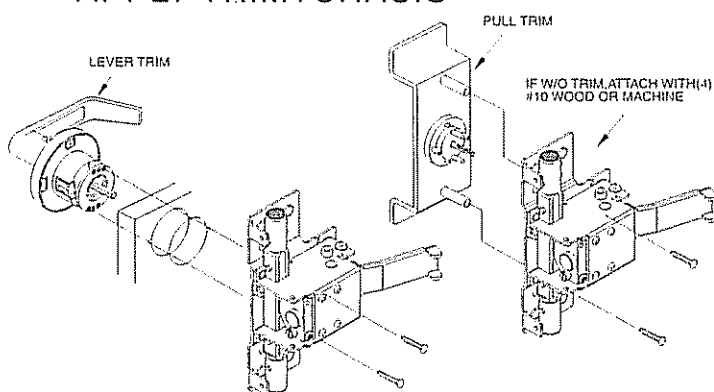


BEFORE INSTALLING DEVICE, PLEASE CHECK :

- 1 IF DOOR FITTED AND HUNG
- 2 SIZE OF EXIT DEVICE, FUNCTION AND DESIGN..
 - 2.1 36" DOORS. CAN BE CUT TO FIT DOORS DOWN TO 30" WIDE
 - 2.2 48" DOORS. CAN BE CUT TO FIT DOORS DOWN TO 36" WIDE
 - 2.3 HAND OF DEVICE AGAINST APPLICATION




- 3 TO CHANGE HAND OF DEVICE
 - 3.1 USE PIN, 2 1/4" LONG, TO KNOCK OUT LIFT LEVER PIN.
 - 3.2 REMOVE LIFT LEVER AND REASSEMBLE OTHER END

4. ATTACH TOP AND BOTTOM CHASIS

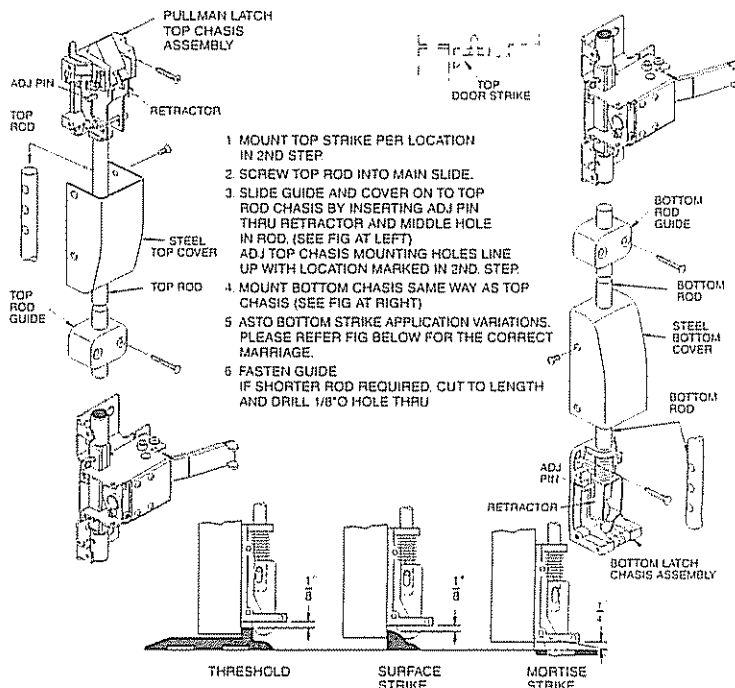


5. APPLY RAIL ASSEMBLE

1. CHECK THE SIZE OF DEVICE. IF CUTTING TO LENGTH IS REQUIRED.
2. DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1 3/4" FROM "Y" MARK CUT OFF POINT ON MOUNTING RAIL.

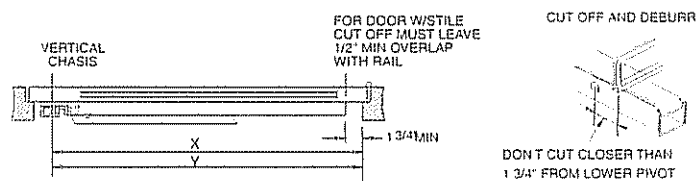


3. DREPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASIS LEVEL RAIL AND FASSTEN CHASIS AND MOUNTING PLATE

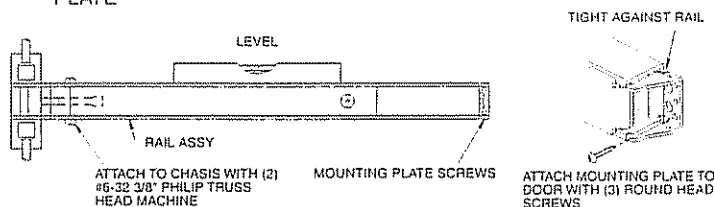

6. APPLY COVER


CHECK FINAL OPERATION OF DEVICE
AND ADJUST THEN FASTEN COVERS

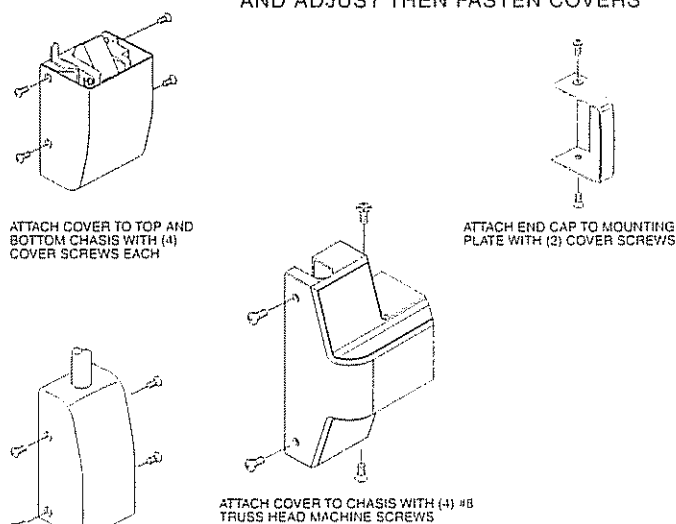

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM


FOR WOOD DOORS :
DRILL(4) $3/32"$ DIA X $1-1/4"$
DEEP PILOT HOLES
FOR METAL DOORS :
TAPPED(4) # $3/16"$ HOLES.

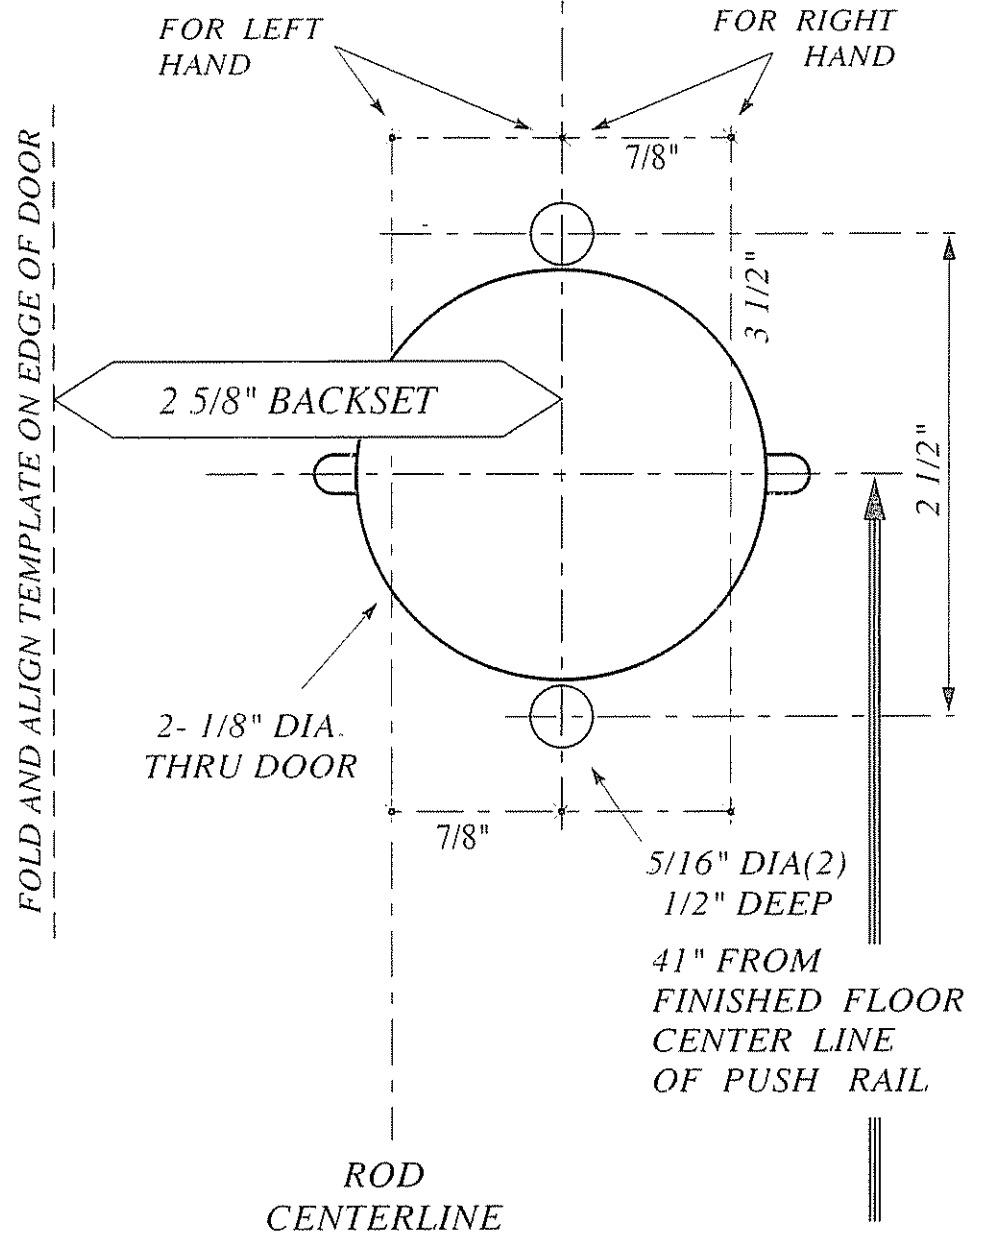


① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM

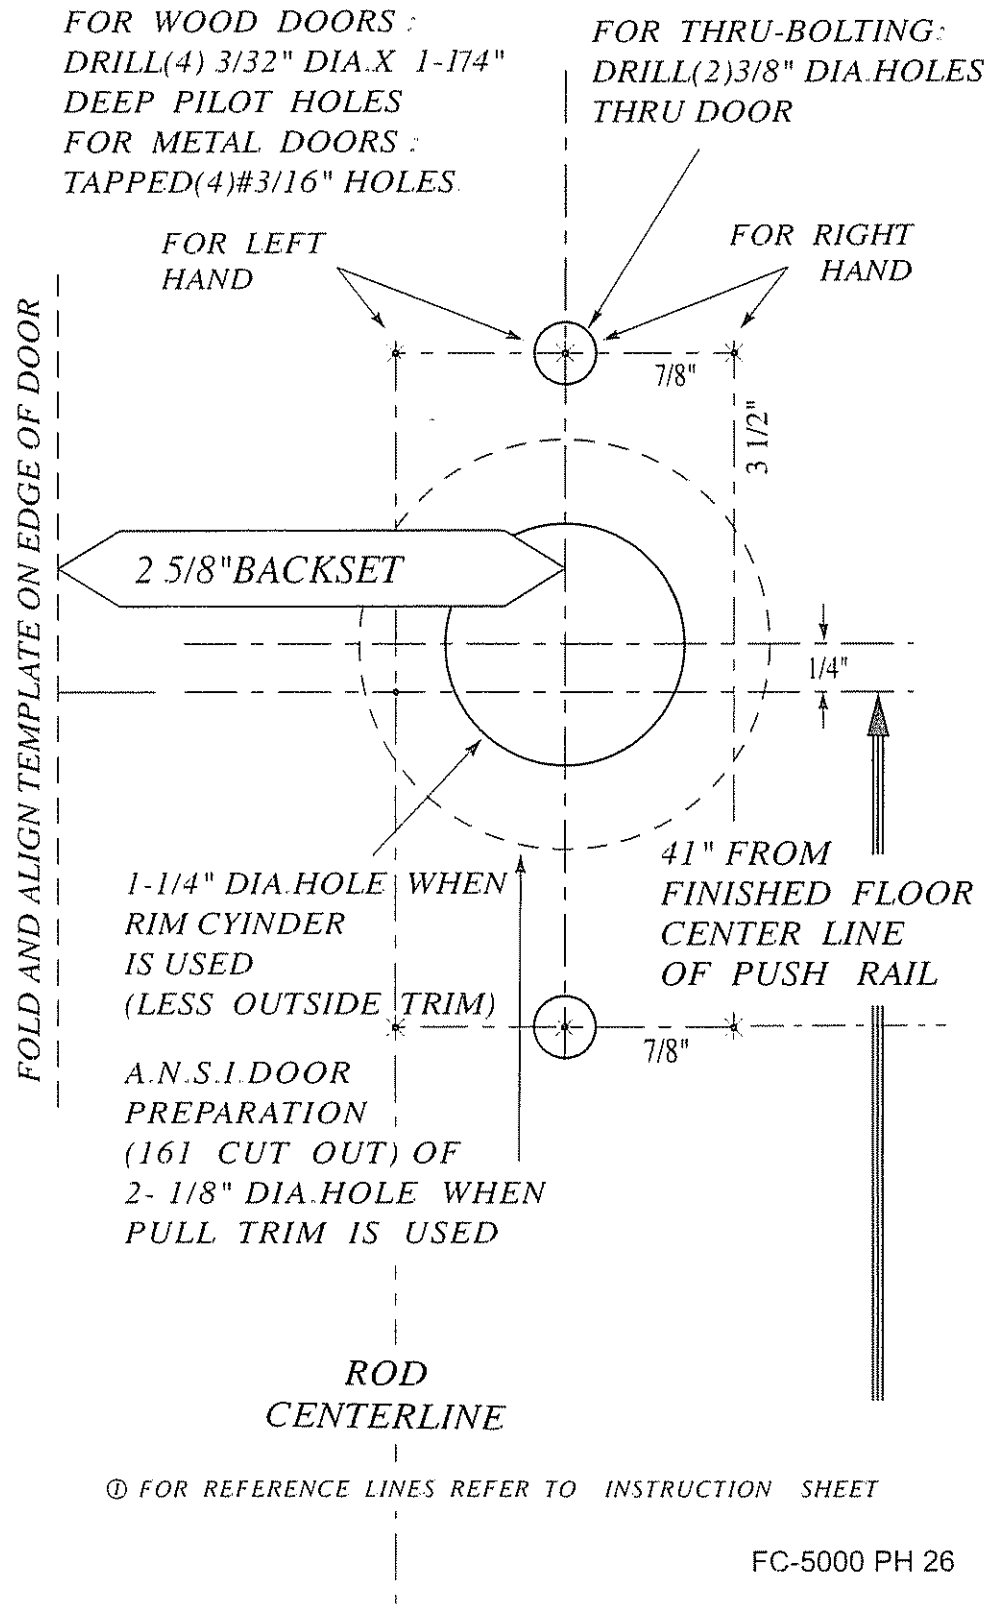


THIS TEMPLATE NOT TO BE USED FOR 881
MONITOR STRIKE, PREPARE DOOR USING
INSTRUCTIONS PACKED WITH MONITOR STRIKE

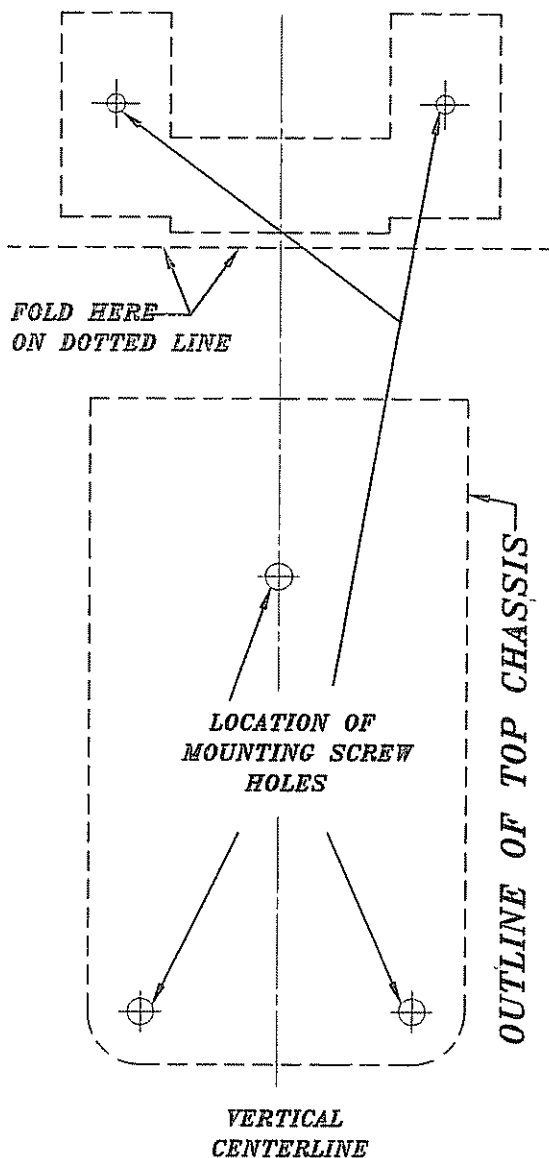

FC-8100

THIS TEMPLATE NOT TO
BE USED FOR MONITOR
STRIKE PREP DOOR USING
INSTRUCTIONS PACKED
WITH MONITOR STRIKE

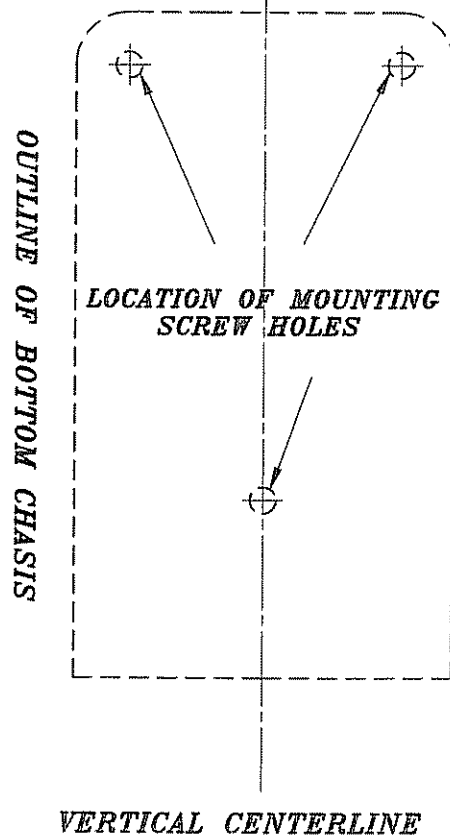

FC-8100